


ECM Input / Output Circuit Diagram

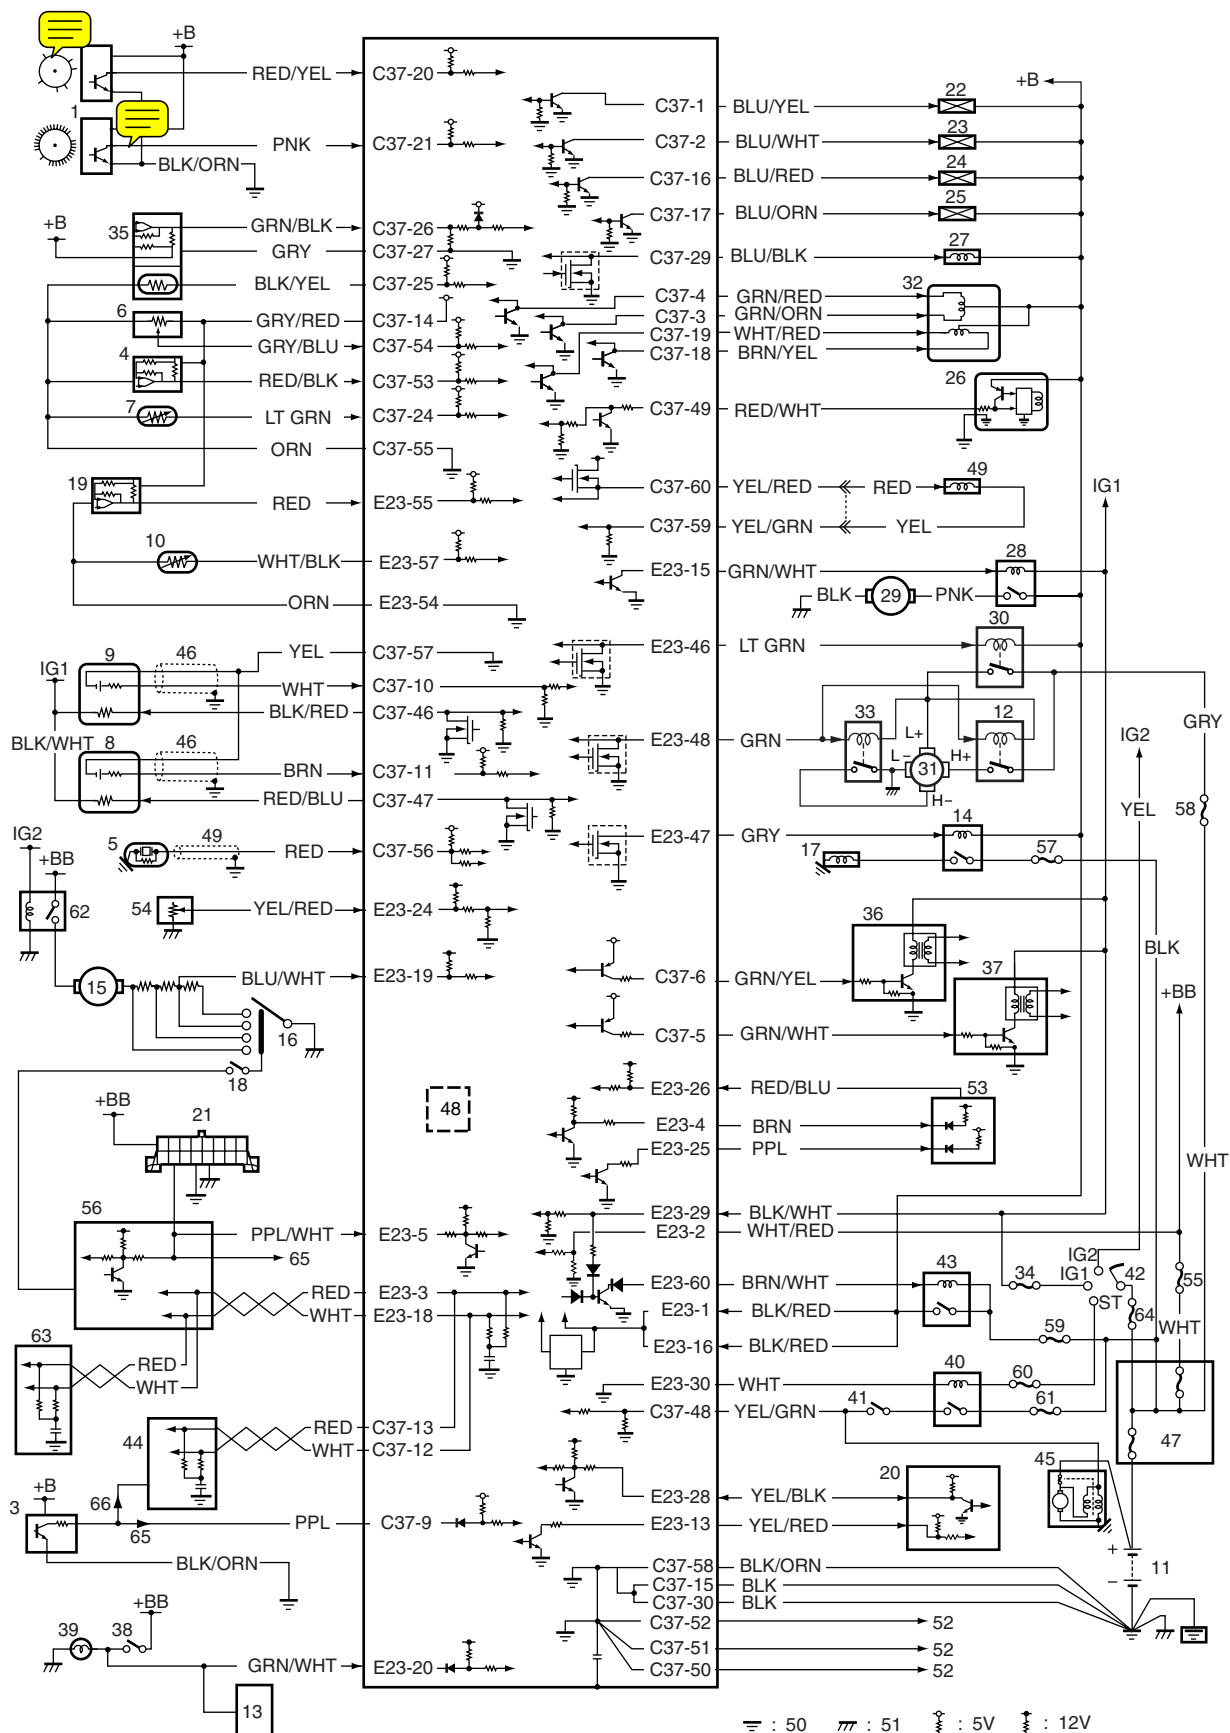

I4RS0A110007-

1. CKP sensor	23. Injector No.2	45. Starting motor
2. CMP sensor	24. Injector No.3	46. Shield wire
3. VSS	25. Injector No.4	47. Main fuse box